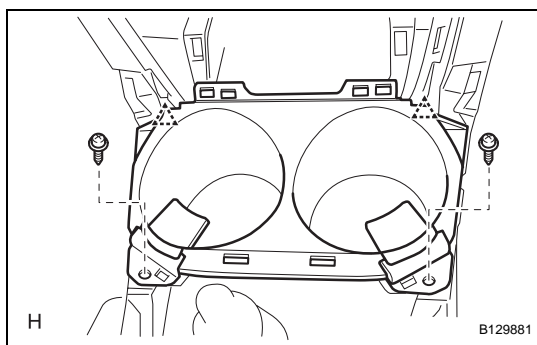
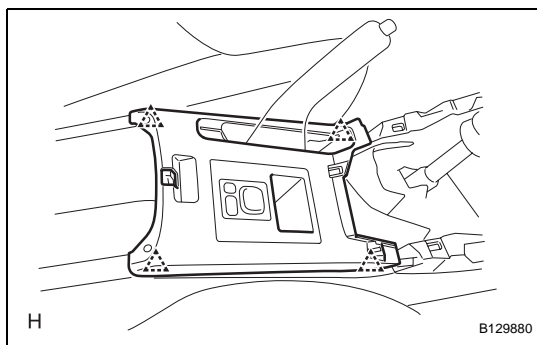
**15. REMOVE SWITCH BASE**


- (a) Detach the 2 clips and 2 claws.
- (b) Disconnect the connectors and remove the switch base.

**16. REMOVE CONSOLE CUP HOLDER BOX**


- (a) Remove the 2 screws.
- (b) Detach the 2 clips and remove the cup holder box.

**17. REMOVE UPPER REAR CONSOLE PANEL SUB-ASSEMBLY**

- (a) Using a screwdriver, detach the 4 claws and 2 clips.
HINT:
Tape the screwdriver tip before use.
- (b) Disconnect the connector and remove the upper rear console panel.

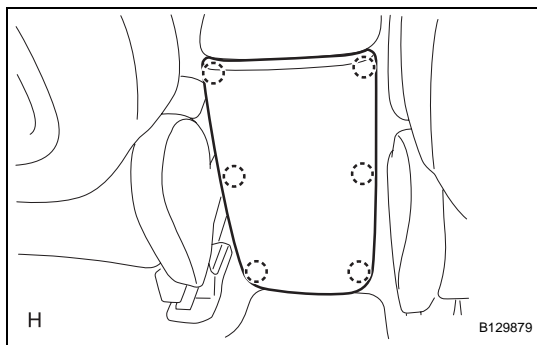**18. REMOVE CONSOLE REAR END PANEL**

- (a) Using a screwdriver, detach the 6 claws and remove the console rear end panel.
HINT:
Tape the screwdriver tip before use.

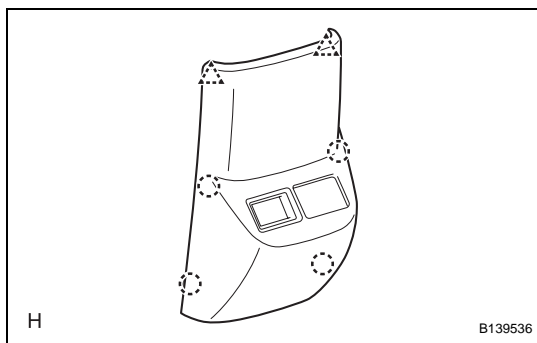**19. REMOVE CONSOLE REAR END PANEL (RSE Type)**

- (a) Using a screwdriver, detach the 4 claws, 2 clips and remove the console rear end panel then disconnect the connectors.
HINT:
Tape the screwdriver tip before use.